

1

 
CAREFULLY UNPACK AND LOCATE ALL PARTS BEFORE BEGINNING ASSEMBLY.

DSP 12 FACING:

- 1 DISPLAY BOARD
- 12 CLEAR PEGS
- 2 BLACK PLASTIC ZIP TIES

DSP 18 FACING:

- 1 DISPLAY BOARD
- 18 CLEAR PEGS
- 2 BLACK PLASTIC ZIP TIES




CLEAR PEG



ZIP TIE

2


INSERT CLEAR PEGS INTO THE SLOTS IN THE FACE OF THE DISPLAY BOARD. TILT HOOKS UP TO INSERT INTO SLOTS AND BRING BACK TO LEVEL TO LOCK IN PLACE.

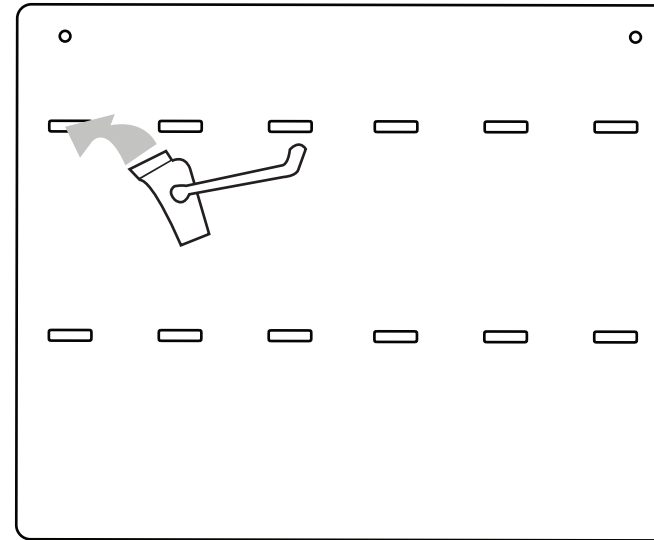

3

HANGING OPTION 1:  
USE THE ZIP TIES PROVIDED BY INSERTING INTO THE HOLES AND ATTACHING TO THE SURFACE WHERE YOU WANT TO HANG THE DISPLAY BOARD

OPTION 1

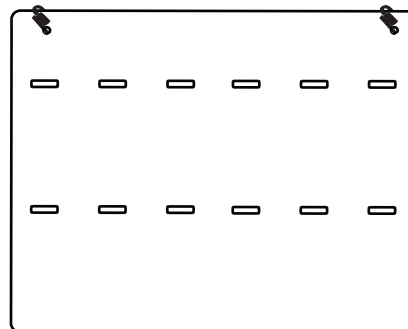

4

HANGING OPTION 2:  
USE METAL PEGS (NOT INCLUDED) BY INSERTING THE METAL PEGS INTO THE HOLES FROM THE BACK OF THE BOARD.

OPTION 2

